




SETTING UP A PINCODE


STEP 1

Swipe on your access point and tap "More". *

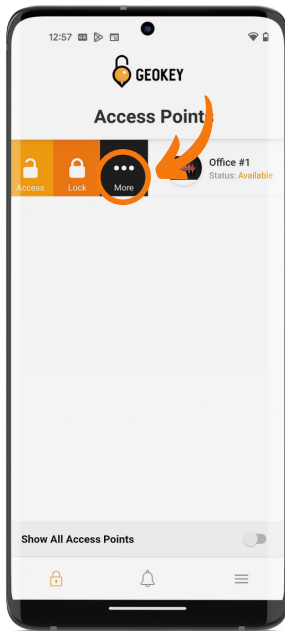


STEP 2

Tap on "Generate Pincode"

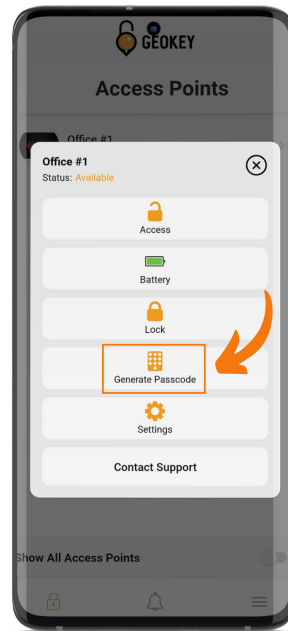


STEP 3

Type in your Pincode. It can be between four and eight numbers long. Then tap "Set Pincode".

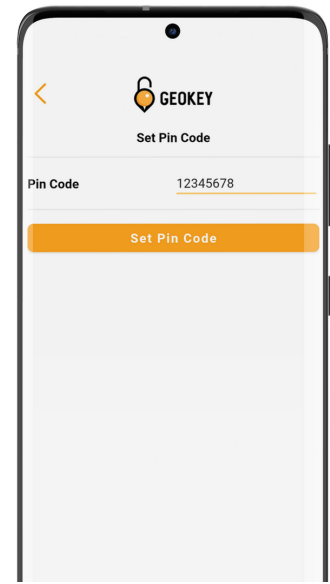

DONE!

Your Pincode has been set. Be sure to save this information for later.

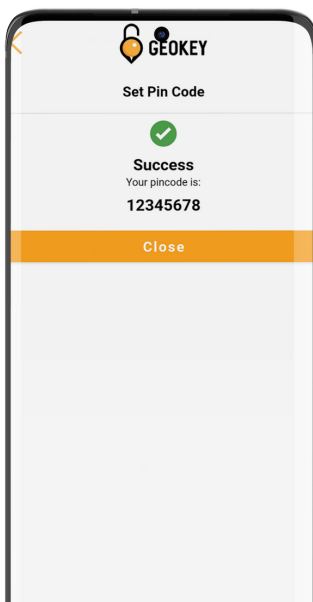

* In order to properly set a PIN, you must be within Bluetooth range of the lock.



GEOKEY

If you encounter any problems while setting up your Pincodes, feel free to reach out to our Support Team!

support@geokeyaccess.com

1 (888) 348-9905


www.geokeyaccess.com



CHECKING YOUR PINCODE


STEP 1

Swipe on your access point and tap "More".

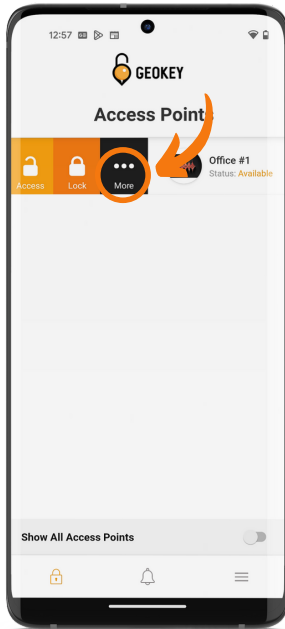


STEP 2

Tap on "Generate Pincode"

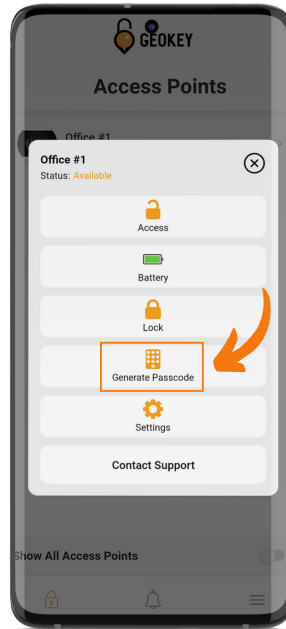


STEP 3

When "Generate Pincode" opens, it will display your current PIN. Tap "Set Pincode" to continue.

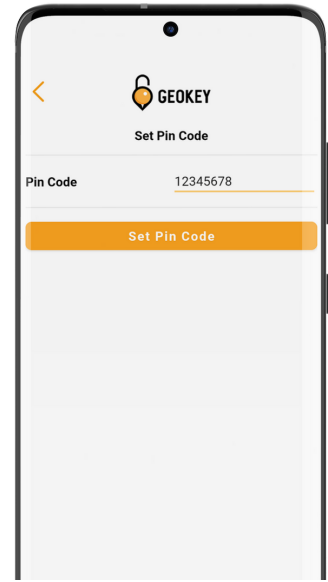

DONE!

Your current Pincode is displayed below, tap on "Close" to return to the list of Access Points.

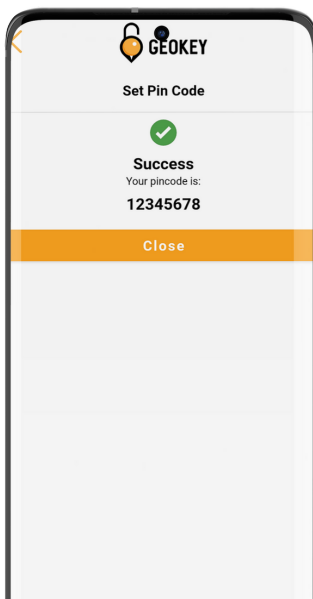

GEOKEY

If you encounter any problems while setting up your Pincodes, feel free to reach out to our Support Team!

support@geokeyaccess.com

1 (888) 348-9905

www.geokeyaccess.com